


INSTALLATION INSTRUCTIONS

TechAFX BlackWrap (NEW!) PTFE, conductive core AN Hose and Fitting

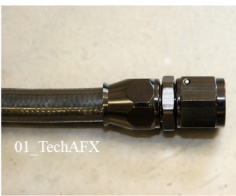

01_TechAFX



02_TechAFX



03_TechAFX



04_TechAFX

TechAFX Blackwrap hose & fitting

Fitting exploded view with Blackwrap

Cutting TechAFX Blackwrap hose

Clean out hose with solvent/air



05_TechAFX



06_TechAFX



07_TechAFX



08_TechAFX

Measure 7/16 in from end & mark

Cut off 7/16 in of sheathing

Peel rubber covering off Blackwrap

Slide collar on fitting



09_TechAFX



10_TechAFX



11_TechAFX



12_TechAFX

Peel braided steel off conductive core

Push 'olive' onto hose end

Fully seat olive on end of hose

Use awl to 'spread' hose into olive



13_TechAFX



14_TechAFX



15_TechAFX



16_TechAFX

Wet male end of fitting with water

Insert fitting into olive/hose

Slide collar to fitting, hand start threads

Tighten collar onto fitting

IT'S EASY: TechAFX braided stainless steel, PTFE, conductive-core AN hose & aluminum fittings can be assembled with hand-tools in your shop. Even better, the final product looks great, is unaffected by today's fuel (unlike rubber-core hose) and is affordable--sounds good doesn't it? Buy your hose and fittings today at www.techafx.com.